

## WIPER AND WASHER SWITCH




### WARNING

In freezing temperatures the washer fluid may freeze on the windscreen and obscure your vision. Warm the windscreen with the defogger before you wash it.


### CAUTION

- Do not open/release the bonnet when the front wiper arms are raised from their original position.
- Do not operate the washer continuously for more than 15 seconds.
- Do not operate the washer if the reservoir tank is empty or frozen.

### WINDSCREEN

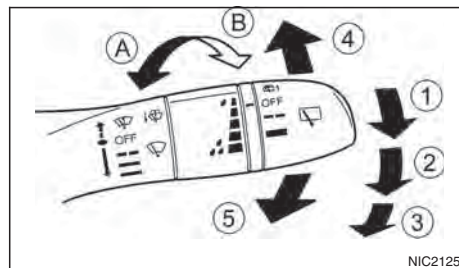

Type A (without AUTO mode)

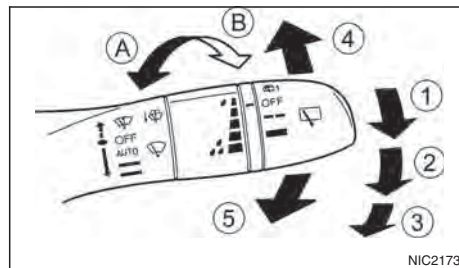

Type B (with AUTO mode)


The windscreen wiper and washer can be operated when the ignition switch is in the ON position.

### Wiper operation

Move the lever up or down to operate the wiper at the following speeds:

- ①: **Intermittent** (▬ ▬) — Type A or **AUTO** — Type B (where fitted) operates the rain-sensing auto wiper system. (See “Rain sensor (where fitted)” later in this section.)
  - The intermittent operation speed can be adjusted by rotating the ring forward (A) (slower) or backward (B) (faster).
  - The wiper operation speed will vary in accordance with the vehicle speed in the AUTO position. For example, when the vehicle speed is high, the intermittent operation speed will be faster.
- ②: **Low** (▬) — for continuous low speed operation
- ③: **High** (▬) — for continuous high speed operation
- ④: — for a single sweep operation of the wiper.

### Washer operation

Pull the lever towards you (5) to operate the washer. For every fifth operation of the wiper and washer, the headlight washing system (where fitted) will be activated to clean the headlights. The headlight washing system is only activated while the headlight cleaner switch is in the  position. See “Headlight cleaner (where fitted)” later in this section.