

M187

Connector	Pin	Description	Connects To	Connector	Pin	Description
M187	21	V CAN H	➡➡➡➡	M48	8	V CAN H
M187	22	M CAN H	➡➡➡➡	M49	31	M CAN H
M187	23	M CAN H TRM	➡➡➡➡	M49	38	M CAN H TRM
M187	24	Empty	Empty	Empty	Empty	Empty
M187	25	Empty	Empty	Empty	Empty	Empty
M187	26	Empty	Empty	Empty	Empty	Empty
M187	27	Empty	Empty	Empty	Empty	Empty
M187	28	Empty	Empty	Empty	Empty	Empty
M187	29	Empty	Empty	Empty	Empty	Empty
M187	30	Empty	Empty	Empty	Empty	Empty
M187	31	Empty	Empty	Empty	Empty	Empty
M187	32	Empty	Empty	Empty	Empty	Empty
M187	33	AUX GND	➡➡➡➡	M49	22	AUX GND
M187	34	AUX R	➡➡➡➡	M49	21	AUX R
M187	35	Empty	Empty	Empty	Empty	Empty
M187	36	Empty	Empty	Empty	Empty	Empty
M187	37	Empty	Empty	Empty	Empty	Empty
M187	38	Empty	Empty	Empty	Empty	Empty
M187	39	MIC VCC	➡➡➡➡	M49	35	MIC VCC
M187	40	HF/VR MIC 1	➡➡➡➡	M49	34	MIC SIGNAL
M187	41	V CAN L	➡➡➡➡	M48	17	V CAN L
M187	42	M CAN L	➡➡➡➡	M49	32	M CAN L
M187	43	M CAN L TRM	➡➡➡➡	M49	39	M CAN L TRM
M187	44	ACC	➡➡➡➡	M48	7	Auto ACC
M187	45	Empty	Empty	Empty	Empty	Empty
M187	46	Empty	Empty	Empty	Empty	Empty
M187	47	Empty	Empty	Empty	Empty	Empty
M187	48	CAM SHIELD	➡➡➡➡	M49	42	AMV SHIELD
M187	49	CAM +	➡➡➡➡	M49	41	CAM SIGNAL
M187	50	Empty	Empty	Empty	Empty	Empty
M187	51	HF/VR MODE	➡➡➡➡	M49		Left empty unless you have a new Microphone
M187	52	Empty	Empty	Empty	Empty	Empty
M187	53	AUX SHIELD	➡➡➡➡	M49	37	USB Shield
M187	54	AUX L	➡➡➡➡	M49	23	AUX L
M187	55	Empty	Empty	Empty	Empty	Empty
M187	56	Empty	Empty	Empty	Empty	Empty
M187	57	Empty	Empty	Empty	Empty	Empty
M187	58	Illumination 5A	➡➡➡➡	M48	9	Illumination 5A
M187	59	MIC GND	➡➡➡➡	M49	36	MIC GND
M187	60	Empty	Empty	Empty	Empty	Empty