

## Your maintenance plan under normal driving conditions QASHQAI DZ - HR13 2WD 6 M/T

Intermediate Maintenance every 12 Months / 18.000 Miles*	
Replacement	Engine oil & engine oil filter
	Air conditioner filter (1 )
Inspection	Intake & exhaust valve clearance (2 )
	Headlamp aiming (except for 2nd interval)
	Brake & clutch, systems and fluids
	Manual transmission gear oil (for leaks)
	Cooling system
	Brake pads, rotors & other brake components
	Foot brake, parking brake & clutch (For free play, stroke & operation)
	Computer diagnosis (3 )
	Body corrosion (4 )
	Navigation Map SD Card (5 )

(1) Even if it is before the replacement interval, if the amount of air conditioner or heater coming out of the vent is drastically low or if the windows fog up easily, please replace the air conditioner filter.

(2) Periodic maintenance is not required. However, if valve noise increases, check valve clearance.

(3) Perform diagnosis for all systems with CONSULT and check for DTC.

(4) Inspect once per year

(5) If eligible, replace after 7200 14400 and 21600 Months

Full Maintenance: Intermediate Maintenance + below operations every 24 Months / 36.000 Miles*	
Replacement	Brake fluid
	Air cleaner filter (Viscous paper type)
	Spark plugs (Iridium-tipped type) (at specific mileage only)
Inspection	Steering gear & linkage, axle & suspension parts, & front drive shafts
	Brake booster vacuum hoses, connections & check valve
	Fuel and EVAP vapor lines

\* Whichever comes first

## Your additional maintenance plan QASHQAI DZ - HR13 2WD 6 M/T

Additional maintenance	
Replace every:	
60 Months / 90.000 Miles*	Engine anti-freeze coolant (1st Replacement)
48 Months / 72.000 Miles*	Engine anti-freeze coolant (after 1st Replacement) (1)
60 Months / 90.000 Miles*	Drive belt and pulleys
180.000 Miles*	Timing chain

(1) Inspect at middle of replacement interval

## Your maintenance plan under severe driving conditions QASHQAI DZ - HR13 2WD 6 M/T

Severe Driving conditions (1)		Conditions (1)
Replace every:		
6 Months / 9.000 Miles*	Engine oil & engine oil filter	a,b,c,d
12 Months / 18.000 Miles*	Air cleaner filter	a
	Brake fluid	f
30 Months / 45.000 Miles*	Drive belt and pulleys	a,c,d,l
Inspect every:		
6 Months / 9.000 Miles*	Brake pads, rotors & other brake components	a,c,g,h,i
12 Months / 18.000 Miles*	Steering gear & linkage, axle & suspension parts, & front drive shafts	g,h

(1) Please refer to the severe driving conditions of your WBMR

\* Whichever comes first